 


**waterpik**<sup>®</sup>  
treat yourself better™

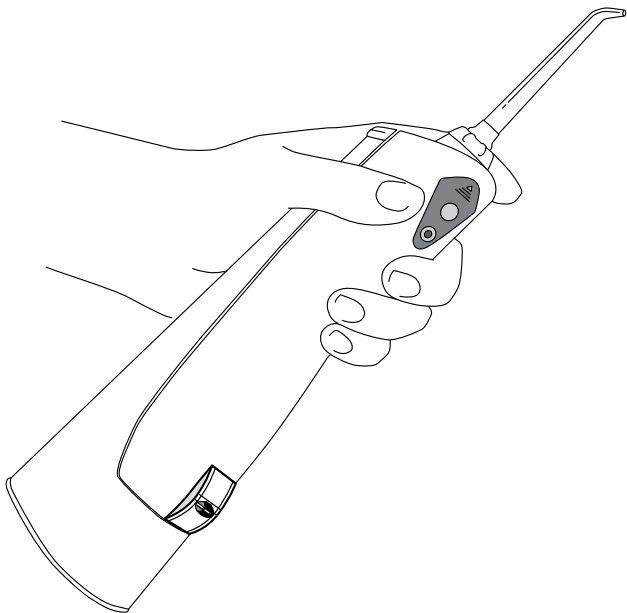

## **Waterpik<sup>®</sup> Water Flosser Model WP-360**

.....  
[www.waterpik.co.uk](http://www.waterpik.co.uk)

## WELCOME

Congratulations! By selecting the Waterpik® Water Flosser you are now on your way to better gum health, and a healthier smile!

 
With a clinically proven combination of water pressure and pulsations, the Waterpik® Water Flosser removes harmful bacteria deep between teeth and below the gumline – where brushing alone won't reach.

Thank you for choosing the Waterpik® Water Flosser.

### Traditional Oral Care




Traditional brushing can't easily reach hidden food debris and harmful bacteria.

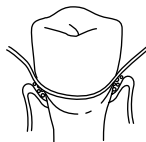

String flossing has limited access below the gumline.

### Oral Care With The Waterpik® Water Flosser

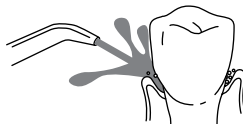 

The Waterpik® Water Flosser removes trapped food debris and harmful bacteria.

## TABLE OF CONTENTS

Important Safeguards	4
Product Description	6
Getting Started	8
Care of Your Waterpik® Water Flosser	13
Troubleshooting Guide	14
Limited One-Year Warranty	15

## IMPORTANT SAFEGUARDS

### IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, the basic safety precautions below should always be followed.

#### READ ALL INSTRUCTIONS BEFORE USING.

#### DANGER:

##### To reduce the risk of electrocution:

- Do not handle charger with wet hands.
- Do not immerse in water or other liquid.
- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub, shower stall or sink.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Check the charger cord for damage before the first use and during the life of the product.

### WARNING:

 
#### To reduce the risk of burns, electric shock, fire, serious injury or damage to tissue:

 
- Do not plug this device into a voltage system that is different from the voltage system specified on the device or charger.
- Do not use this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into any liquid. Contact Waterpik International Inc. on +44 (0) 844 335 6354.
- Do not direct water under the tongue, into the ear, nose or other delicate areas. This product is capable of producing pressures that may cause serious damage in these areas. See operating instructions for correct usage.
- Use this product only as indicated in these instructions or as recommended by your dental professional.
- Only use tips and accessories that are recommended by Water Pik, Inc.

- Fill reservoir with water or other dental professional recommended solutions only.
- Do not drop or insert any foreign object into any opening on the product.
- Keep charging unit and cord away from heated surfaces.
- Do not operate where oxygen or aerosol sprays are being used.
- Do not use mouthwashes/rinses that contain iodine, bleach, or tea tree oil.
- Do not use while wearing any oral jewelry. Remove prior to use.
- Do not use if you have an open wound on your tongue or in your mouth.
- If your physician advised you to receive antibiotic premedication before dental procedures, you should consult your dentist before using this instrument or any other oral hygiene aid.
- For household use only. Do not use outdoors.
- Closely instruct and supervise children and individuals with special needs in the proper use of this product.
- Children should be supervised to ensure that they do not play with the appliance.


**SAVE THESE INSTRUCTIONS.**

## PRODUCT DESCRIPTION

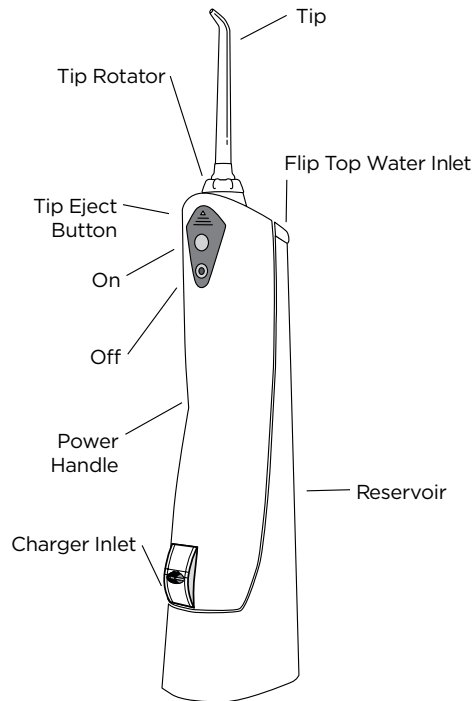


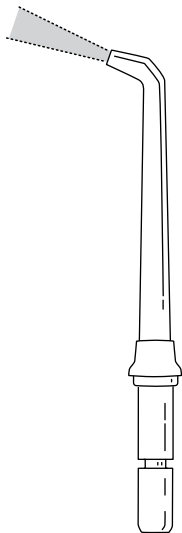

Deep Cleaning

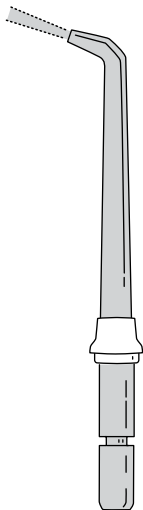 

Gentle Cleaning

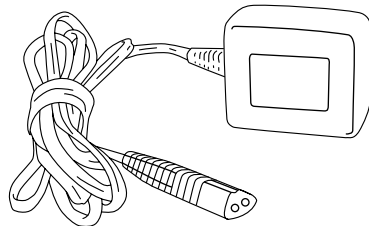 

Charger


Waterpik International, Inc. p/n 20009323

Replacement tips/attachments may be purchased directly from Waterpik International, Inc. +44 (0) 844 335 6354 or from your local Water Pik brand stockist.

## GETTING STARTED

 
### Important! Turn Water Flosser off and charge for 24 hours before first use.

Plug the cord into any standard electrical outlet. Make sure you push the switch into the "OFF" position before charging. The unit will not charge if the switch is in the "ON" position. See "Care of your Waterpik® Water Flosser" for guidance on how to look after your battery. The Waterpik® Water Flosser will stay charged for up to 2 weeks depending on use.

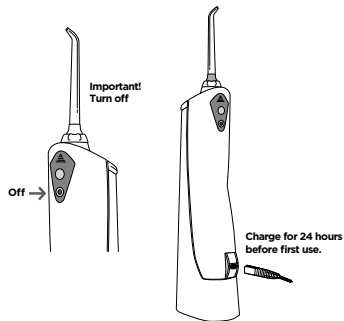


### Preparing the Reservoir

 Slide Water Flosser power handle into back of reservoir and press firmly to snap into place.


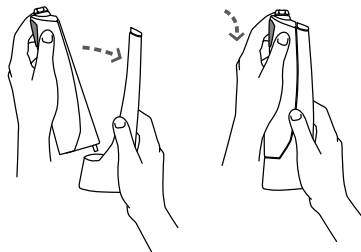


 Lift flip top on reservoir and fill the reservoir with lukewarm water.

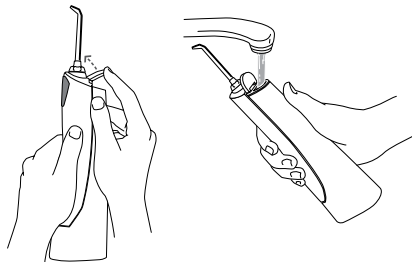

### Inserting and Removing Tips

  
Insert tip into the center of the knob at the top of the Water Flosser handle. The colored ring will be flush with the end of the knob if the tip is correctly locked into place.



To remove the tip from the handle, press the tip eject button and pull tip from the handle.

## Adjusting the Pressure Setting

 
You can adjust the pressure setting on your Water Flosser by simply changing tips. There are two tips available—a high pressure tip for deeper cleaning and a low pressure tip for gentle cleaning.

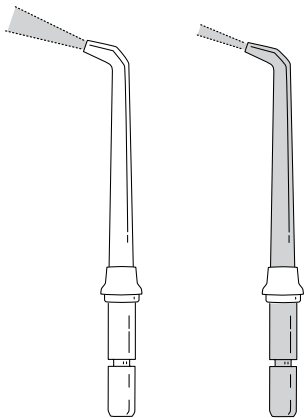


High pressure for  
deep cleaning

Low pressure for  
gentle cleaning

 Keep unit upright during use for best results.



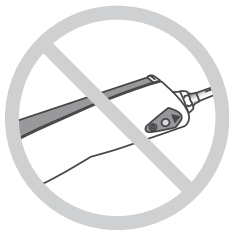


 Direct the stream by turning the knob at the top of the handle.

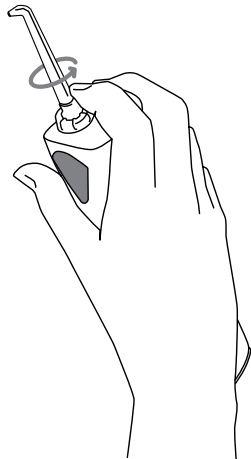


## Recommended Technique

   Lean low over sink and place the jet tip in mouth. Aim the jet toward teeth, and turn the unit on.

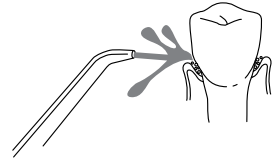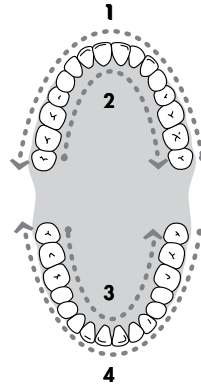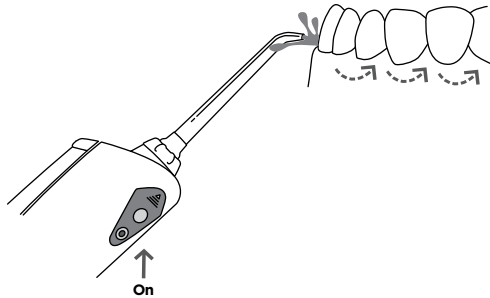


 Direct the jet stream at a 90-degree angle to your gumline. **Slightly close lips to avoid splashing** but allow water to flow freely from mouth into the sink. For best results, start in the molar area (back teeth) working toward the front teeth. Glide jet tip along gumline and pause briefly between teeth. Continue until all areas around and between the teeth have been cleaned.

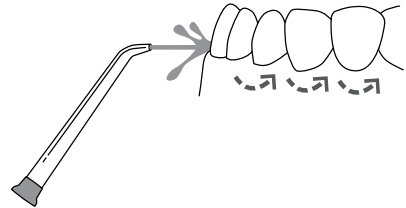


### When Finished

 Turn the unit off. Empty any liquid left in the reservoir.

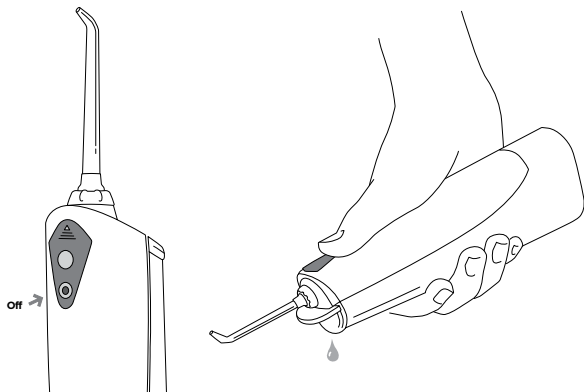

 If desired, the reservoir may be removed from the power handle by pushing down on the top of power handle and pulling it away from the reservoir.

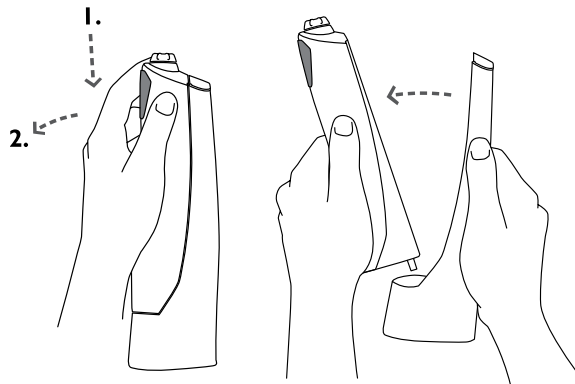

### **Using Mouthwash and Other Solutions**

Your Waterpik® Water Flosser can be used to deliver mouthwash and antibacterial solutions. Ask your dental professional to recommend the appropriate solution for you. Note: use of some antibacterial solutions could shorten the life of your Waterpik® Water Flosser.

After using any special solution in the reservoir, take a moment after every use to rinse the unit. Partially fill the reservoir with warm tap water. Aim the jet tip into your sink. Turn on the unit and let it run until empty. This will help keep the tip from clogging and help your unit to last longer.

## CARE OF YOUR WATERPIK® WATER FLOSSER

Never immerse the unit in water. Wipe the exterior when necessary with a soft cloth and mild non-abrasive cleanser. Reservoir may be washed with soapy water or in top rack of dishwasher.

Before cleaning, unplug from the electrical outlet.

Before exposing the Water Flosser to freezing temperatures, remove the reservoir and run the unit until completely empty.

### **Battery Care**

Before first use charge for 24 hours to obtain full charge.

To charge your Water Flosser, plug the cord into any standard electrical outlet. Make sure you push the switch into the 'OFF' position before charging. The unit will not charge if the switch is in the 'ON' position.

If you use your Water Flosser once a day or less, it is recommended you charge it overnight, once a week. If you use it twice a day or more, charge the unit more frequently. Do not run the batteries down completely as this may shorten the lifespan of the batteries and will require charging the unit for 24 hours to obtain a full charge.

If the Water Flosser is to be stored for an extended period of time, charge it for 24 hours before storing. Never store the Water Flosser for extended periods unless it is fully charged. To maximize the lifespan of the batteries the battery charger may be kept connected to the unit continuously, except for when the product is in use.

### **Battery Disposal**

The unit contains a Nickel Metal Hydride battery. At the end of the battery life, please recycle the unit at your nearest recycle center per local or state requirements. The battery is not replaceable.

### **Service Maintenance**

Waterpik® Water Flossers have no consumer-serviceable electrical items and do not require routine service maintenance. For all your service needs please call our UK customer service number on +44 (0) 844 335 6354.

Some replacement parts and accessories for the Water Flosser are also available from Waterpik International, Inc. at [www.waterpik.co.uk](http://www.waterpik.co.uk). You may also call our UK customer service number at +44 (0) 844 335 6354.

For questions or problems please call the customer service centre before returning the product. Please do not send your unit to the Waterpik International, Inc. address as this can cause lengthy delays.

Refer to the serial and model numbers in all correspondence. These numbers are on the bottom of the unit under the reservoir.

## TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTIVE ACTION
<b>Tips</b> Leakage between the tip and the tip rotator.	1) Tip not fully engaged.	1) Remove tip and reinstall.
<b>Water Flosser</b> Reservoir leaks.	1) Liquid was left in reservoir. 2) Power handle not correctly engaged with reservoir. 3) Water inlet is open.	1) Always empty the reservoir after use. 2) Remove reservoir then reinstall as per instructions. 3) Close water inlet.
Inadequate pressure/No fluid flow.	1) Unit is upside down. 2) Insufficient liquid in reservoir. 3) Reservoir connection clogged. 4) Tip is clogged with debris	1) Tip must be higher than reservoir for correct water flow. 2) Fill with liquid. 3) Fill reservoir with warm tap water and one cap of vinegar. Run until empty. Rinse with full reservoir of tap water. 4) Flush tip under faucet or replace tip.
Unit does not charge.	1) Mains power socket is not live. 2) Switch is in ON position during charging.	1) Turn ON the mains power socket; try an alternative mains power socket. 2) Turn unit switch to OFF position for charging.
Unit doesn't start.	1) Battery not charged.	1) Be sure outlet is functioning; test with another appliance. See "Care of your Waterpik® Water Flosser" for details on how to charge the battery.

Still have questions? Go to [www.waterpik.co.uk](http://www.waterpik.co.uk)

If none of these corrective actions are successful, call the Waterpik International, Inc. UK Customer Service Centre: +44 (0) 844 335 6354.

**LIMITED ONE-YEAR WARRANTY**

Water Pik, Inc. warrants to the original consumer of this new product that it is free from defects in materials and workmanship for 1 year from the date of purchase. Consumer will be required to submit the original purchase receipt as proof of purchase date and if requested, the entire product, to support a warranty claim. Water Pik, Inc. will replace at its discretion any part of the product, which in its opinion is defective, provided the product has not been abused, misused, altered or damaged after purchase, was used according to instructions, and was used only with accessories or consumable parts approved by Water Pik, Inc. Installation is the responsibility of the consumer and is not covered by the warranty. This limited warranty excludes accessories or consumable parts such as tips, etc.

This warranty gives you specific legal rights. You may also have other rights that vary, depending on the law in your place of residence.



**Water Pik, Inc.**

1730 East Prospect Road  
Fort Collins, CO 80553-0001 USA

**WaterPik International, Inc.**

Castle Court, 41 London Road  
Reigate, Surrey RH2 9RJ, United Kingdom

**[www.waterpik.co.uk](http://www.waterpik.co.uk)**

Waterpik® is a trademark of Water Pik, Inc. registered in Argentina, Australia, Canada, Chile, China, Czech Republic, Hungary, India, Mexico, New Zealand, Pakistan, Poland, Russian Federation, Singapore, South Africa, Switzerland, Taiwan, Ukraine, United Kingdom and the United States.

Waterpik® (stylized) is a trademark of Water Pik, Inc. registered in Canada, EU, Japan, Mexico, and the United States.

Treat Yourself Better™ is a trademark of Water Pik, Inc.

Designed in USA.

Made in CHINA.

Form No. 20013495-F AA

©2010 Water Pik, Inc.

U.S. Patent 5,399,089; 4,989,590; 5,779,654; 6,056,710; 6,475,173; 6,699,654 other patents pending.

